
Toshiba Satellite P55t-A5116 Power Jack Replacement

Use this guide to remove the Toshiba Satellite P55t-A5116 Power Jack.

Written By: Rachael Ferry

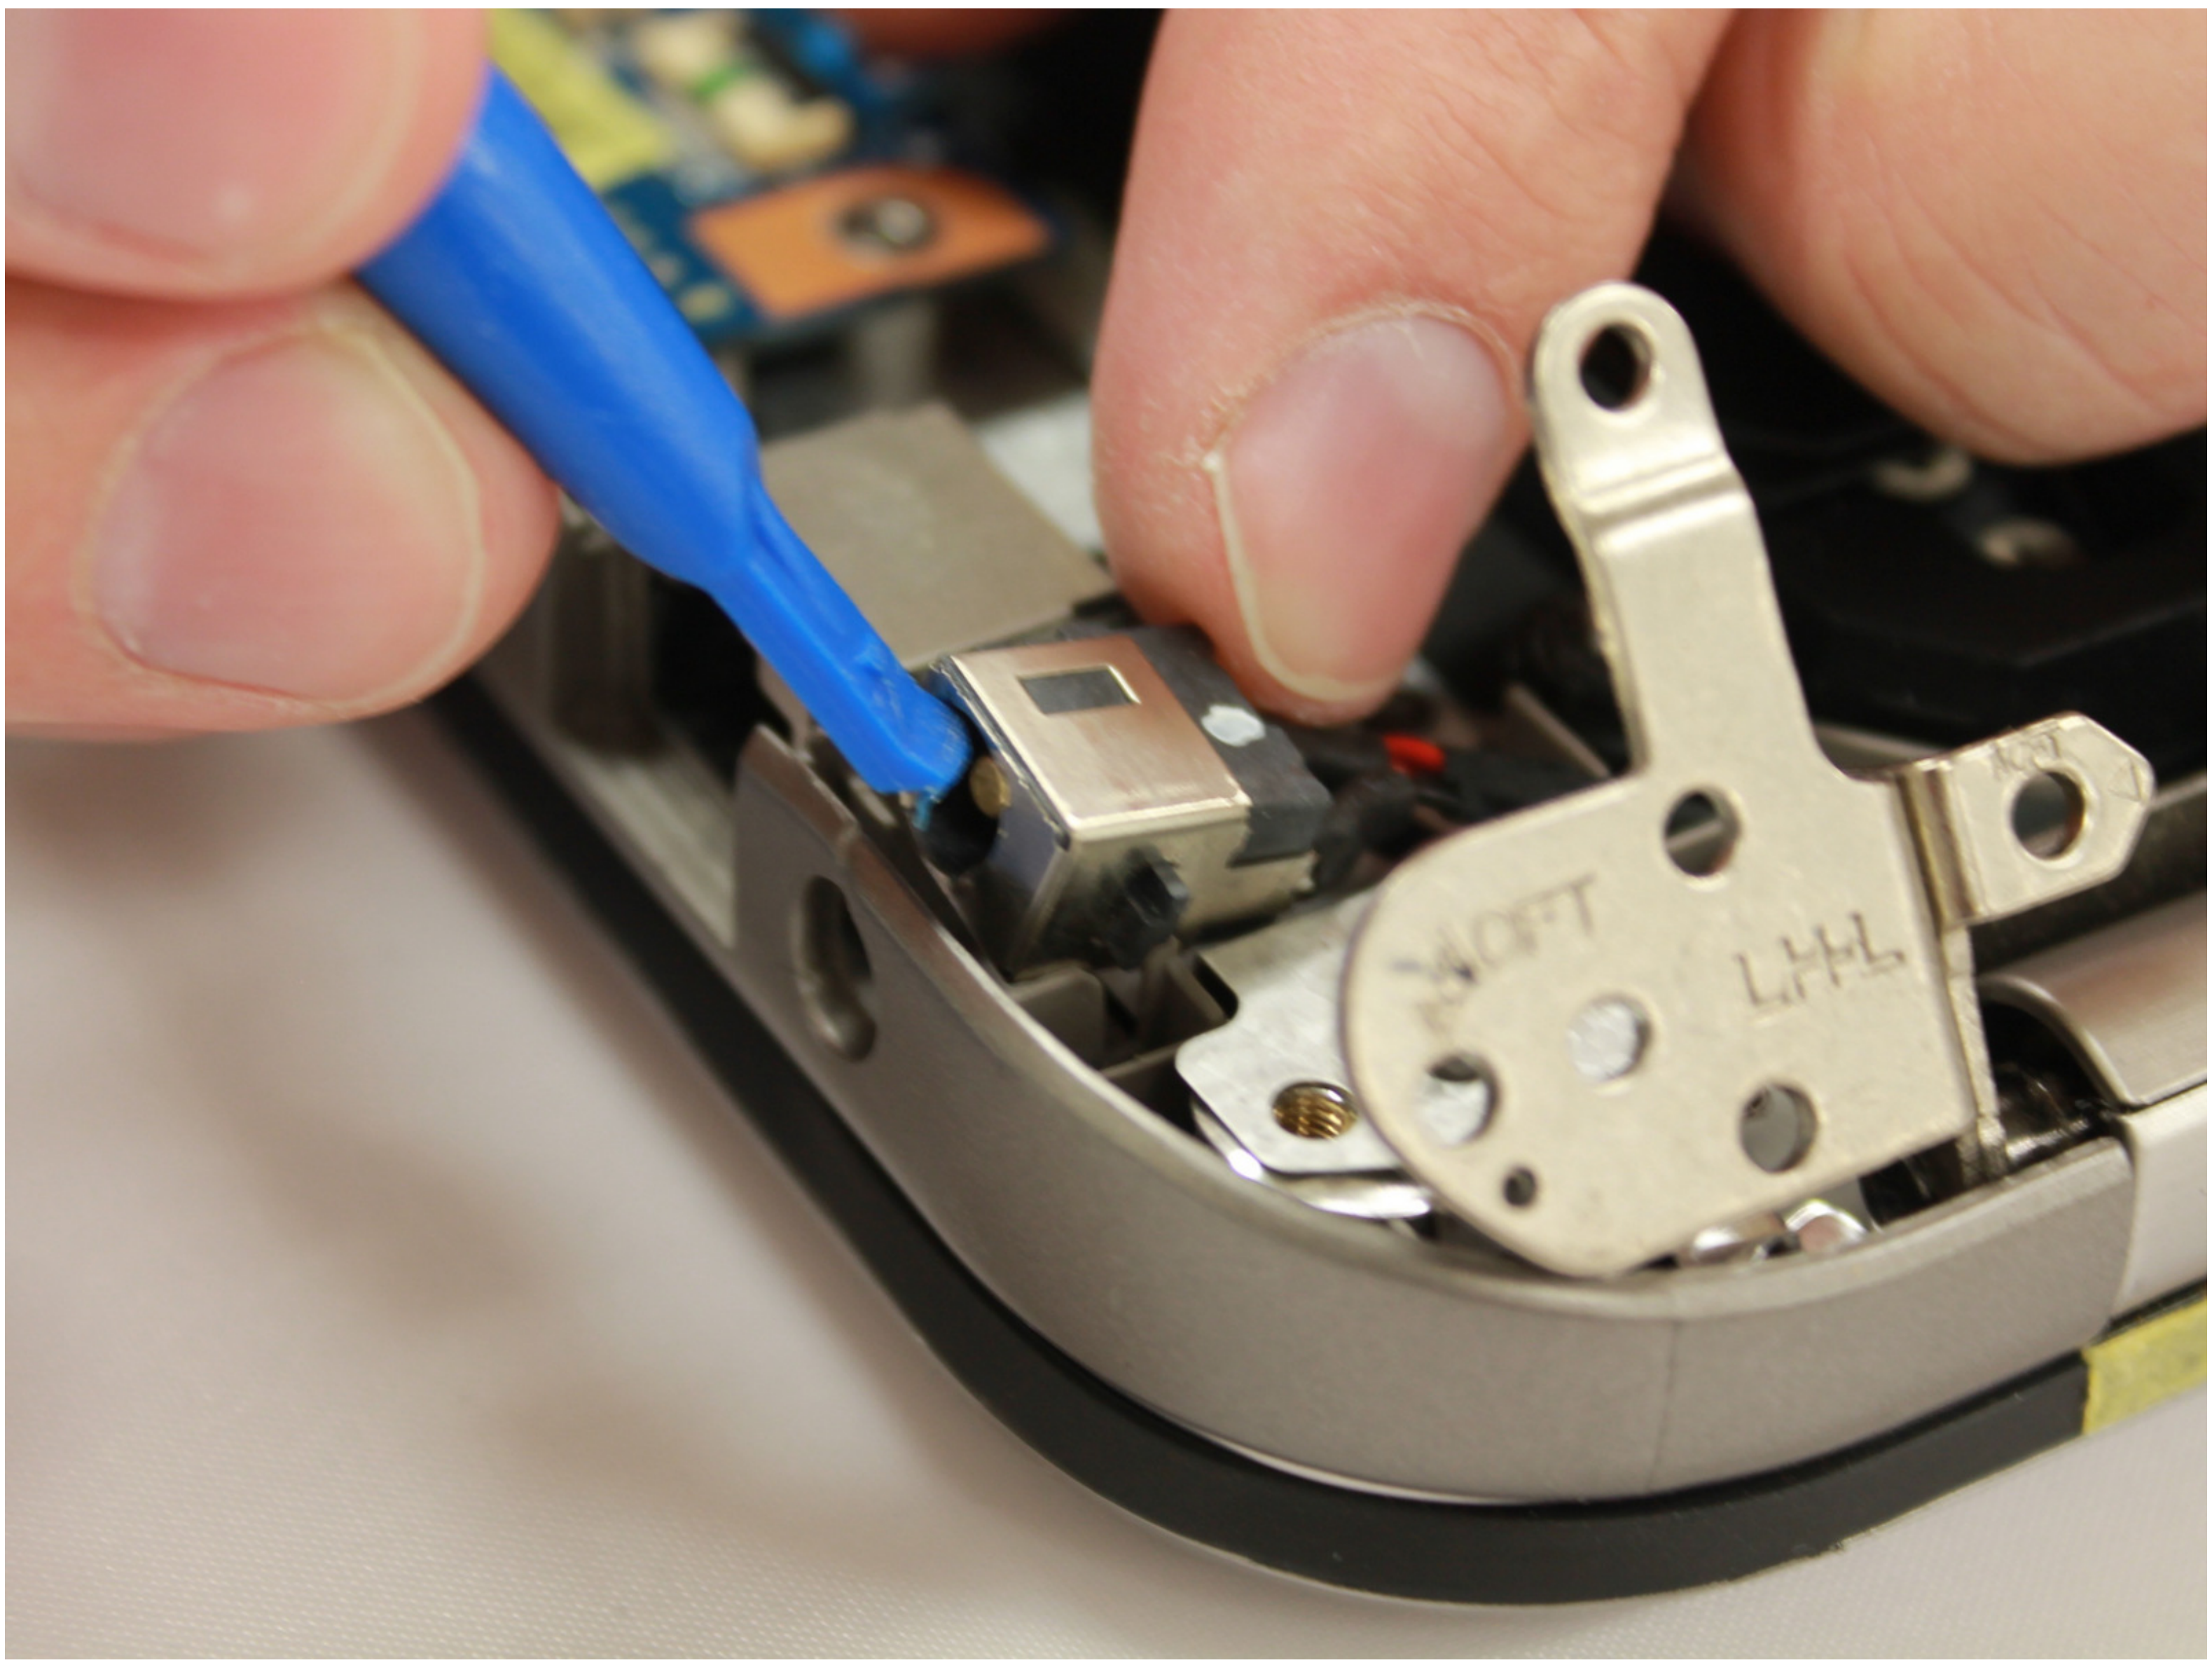

INTRODUCTION

Use this guide to remove the Toshiba Satellite P55t-A5116 Power Jack.


TOOLS:


- Tweezers (1)
- iFixit Opening Tools (1)
- Phillips #00 Screwdriver (1)

PARTS:

- Power Jack (1)
Computer Part


Step 1 — Back Casing

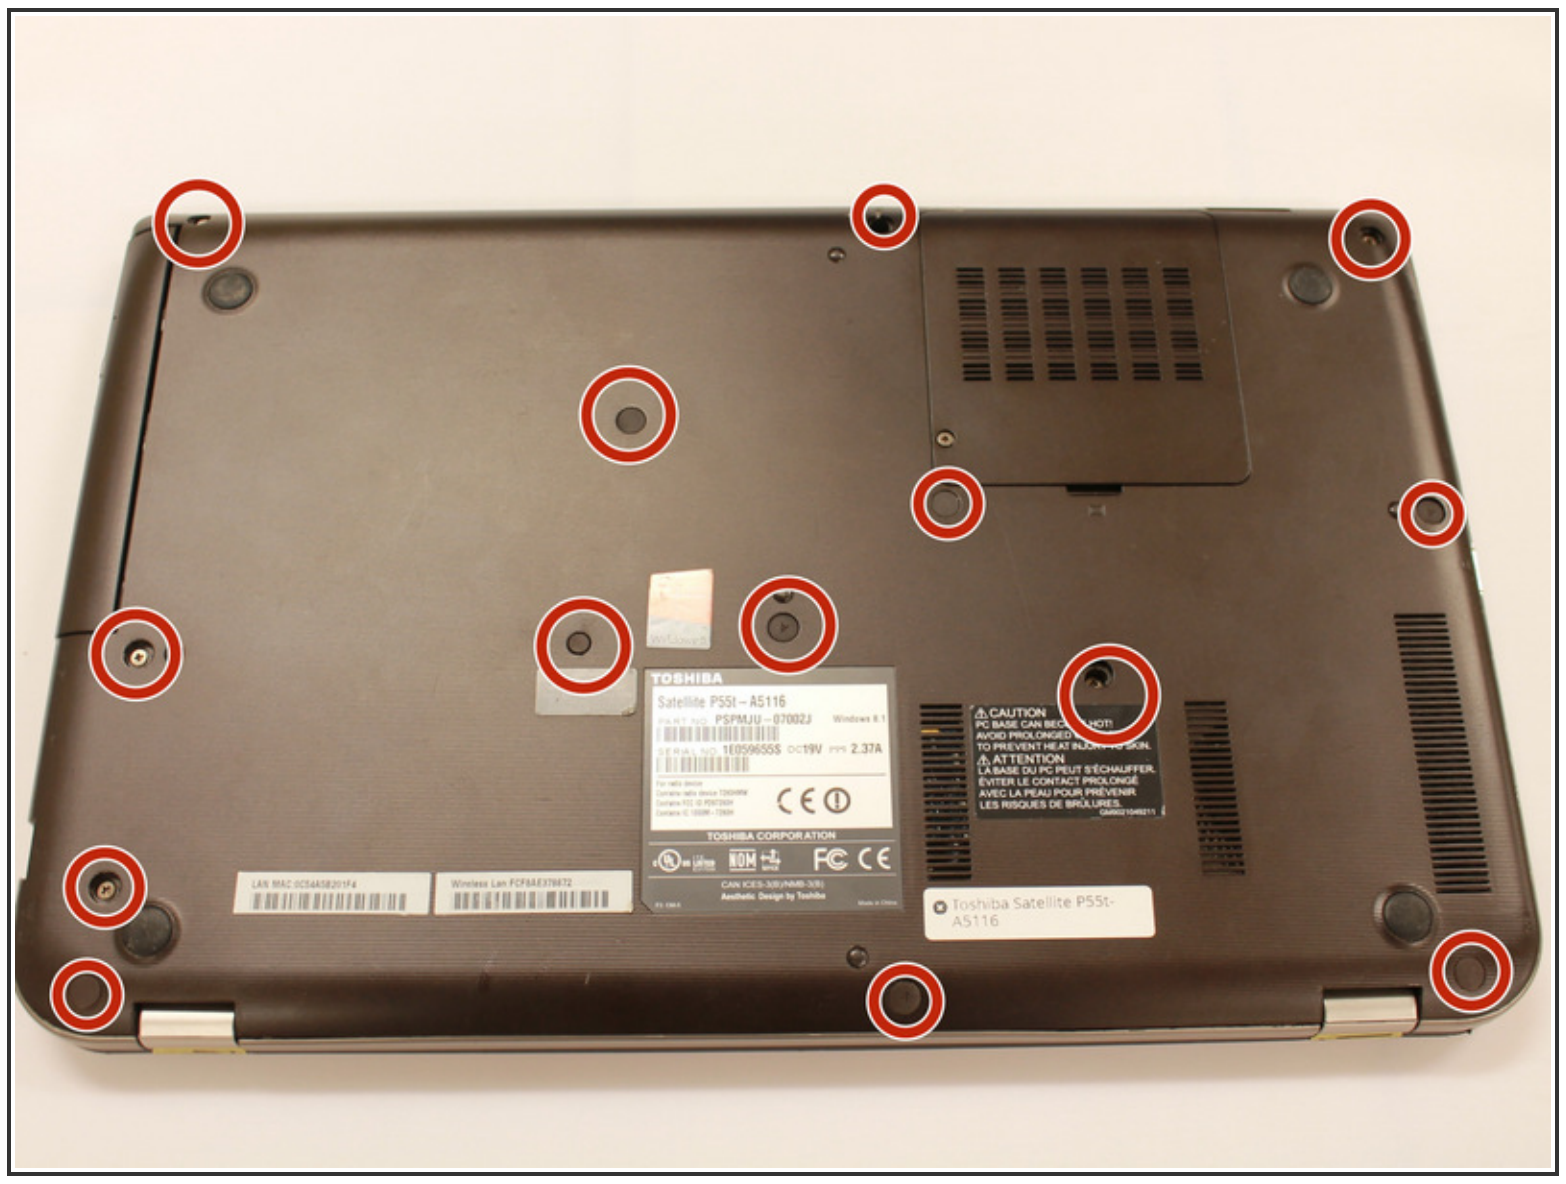

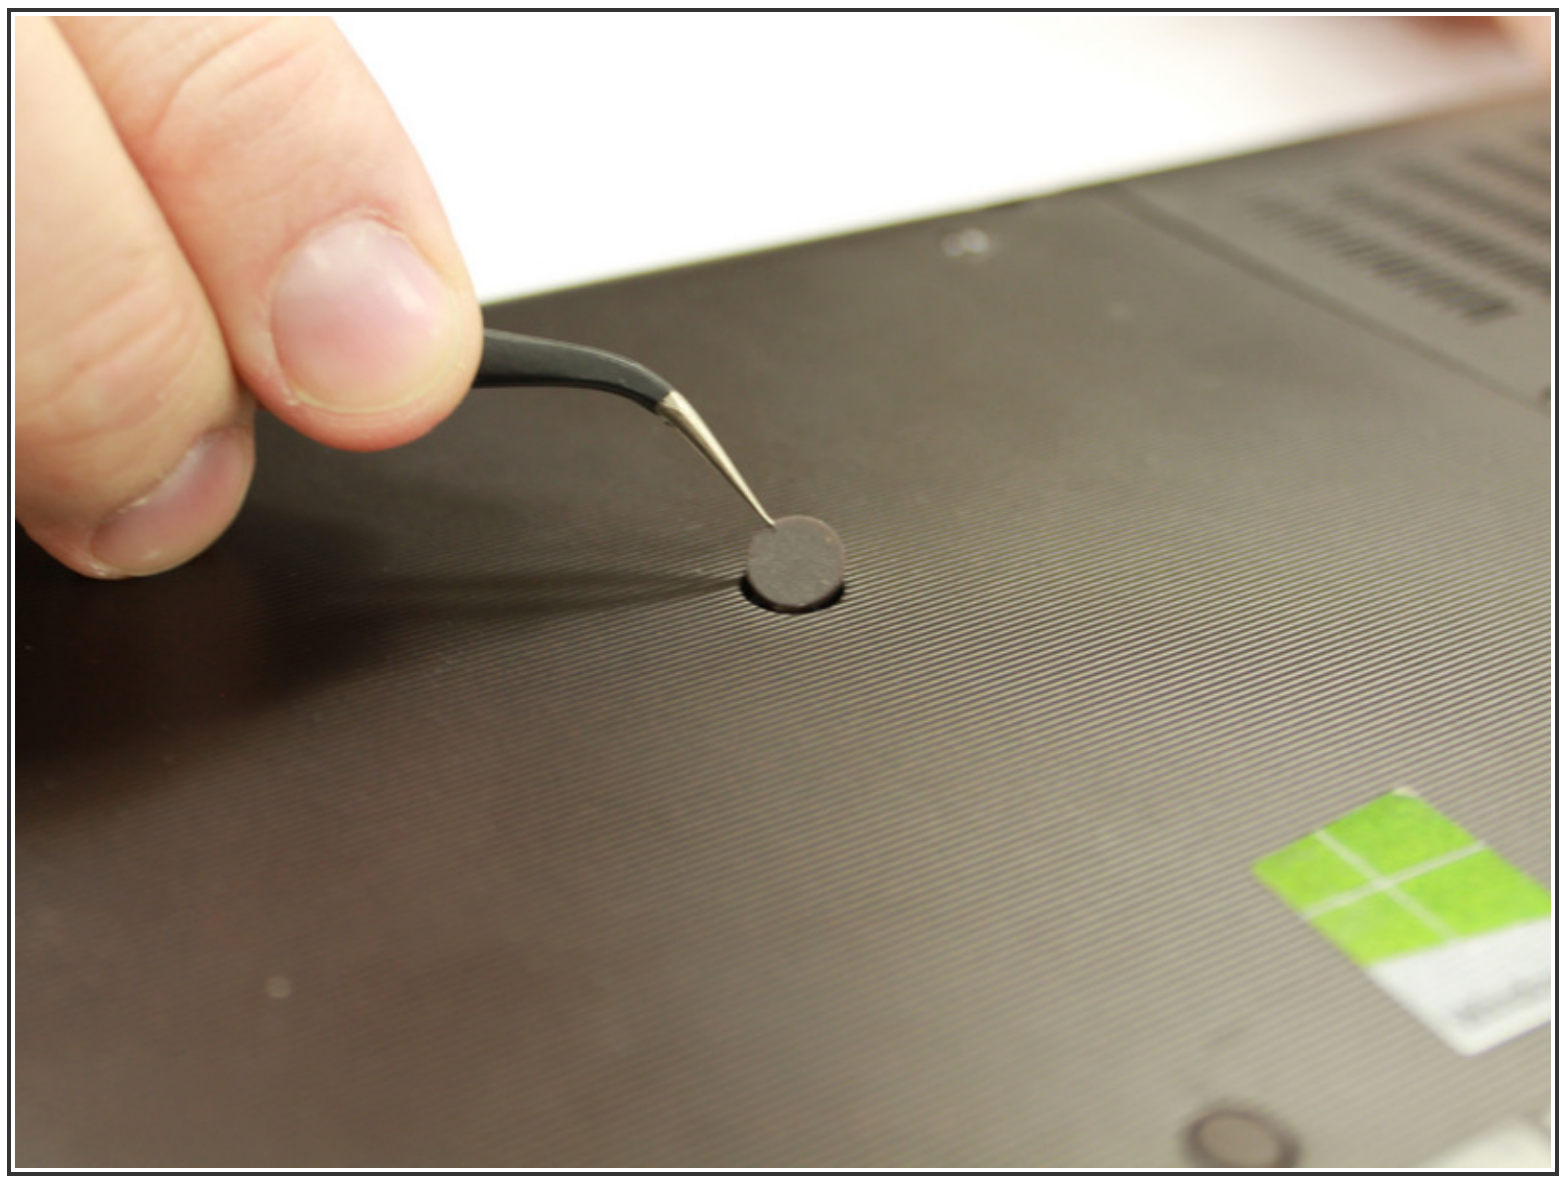

- Close laptop and turn it upside down
- Remove the 14 circular rubber covers with tweezers along with one smaller more cylindrical rubber cover.

Step 2

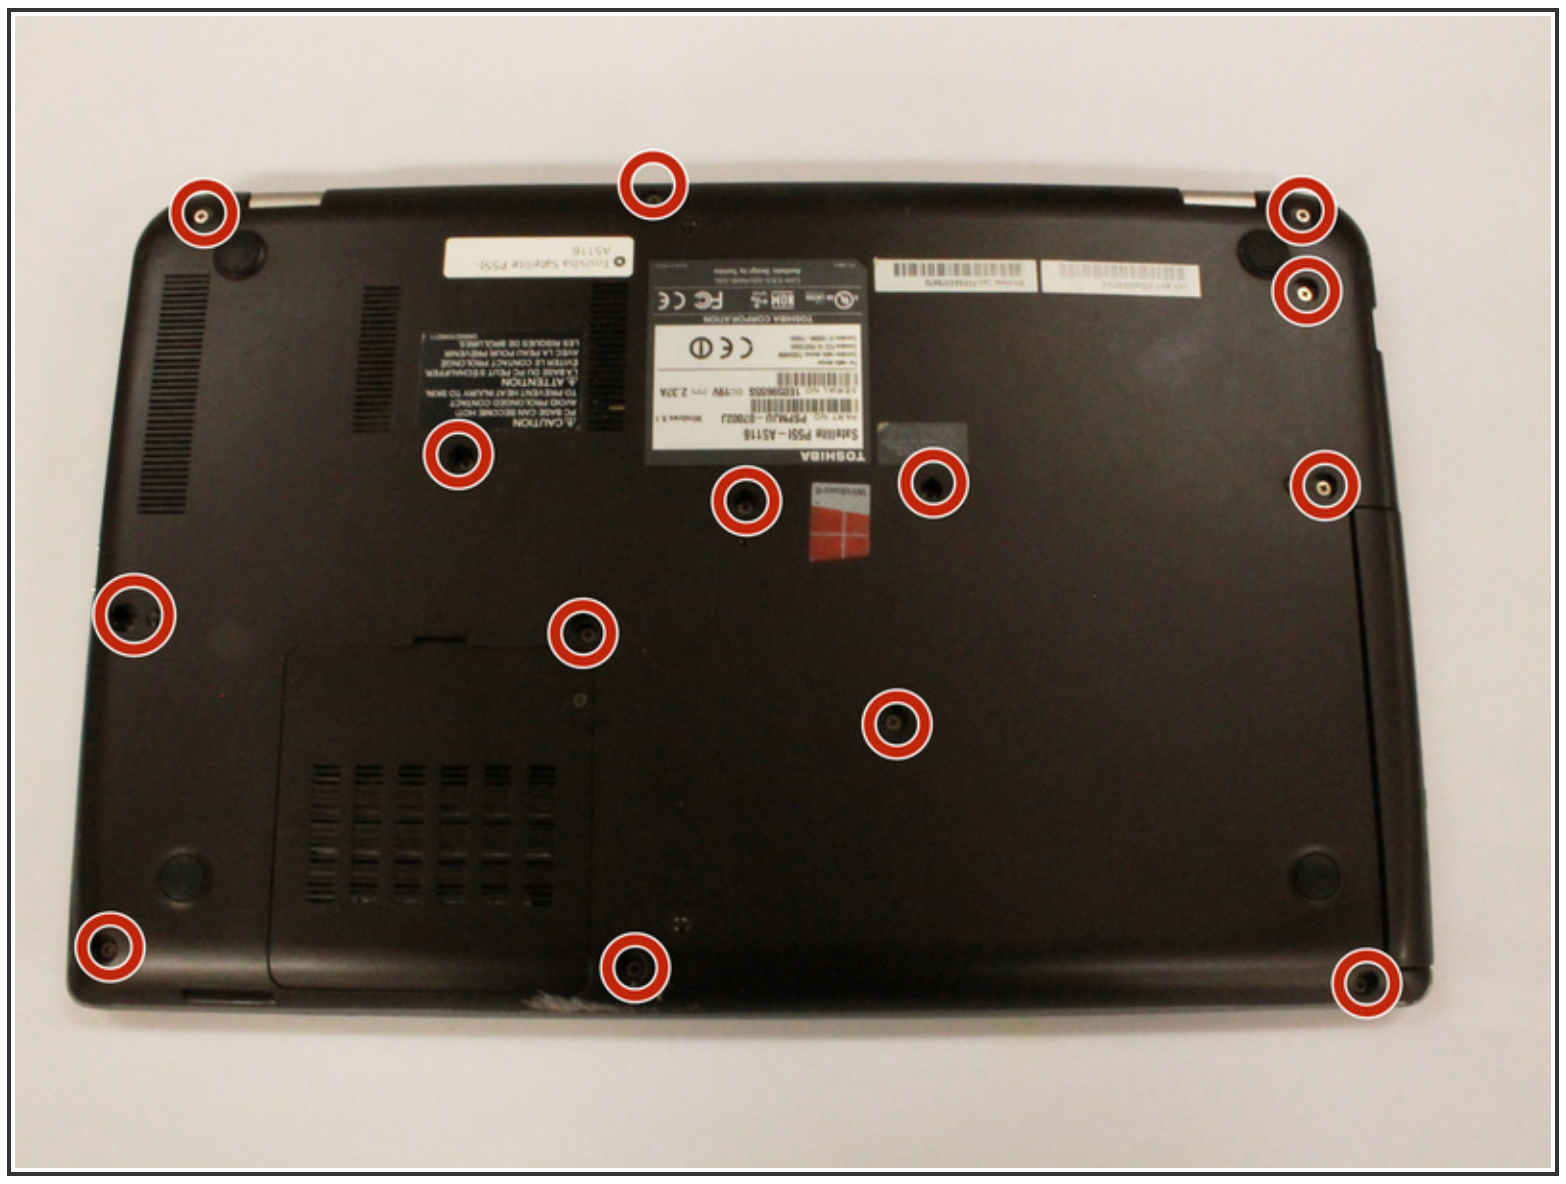




- Using the #PH0 screw head, remove 14 (5.7 mm) screws from the back casing.

Step 3







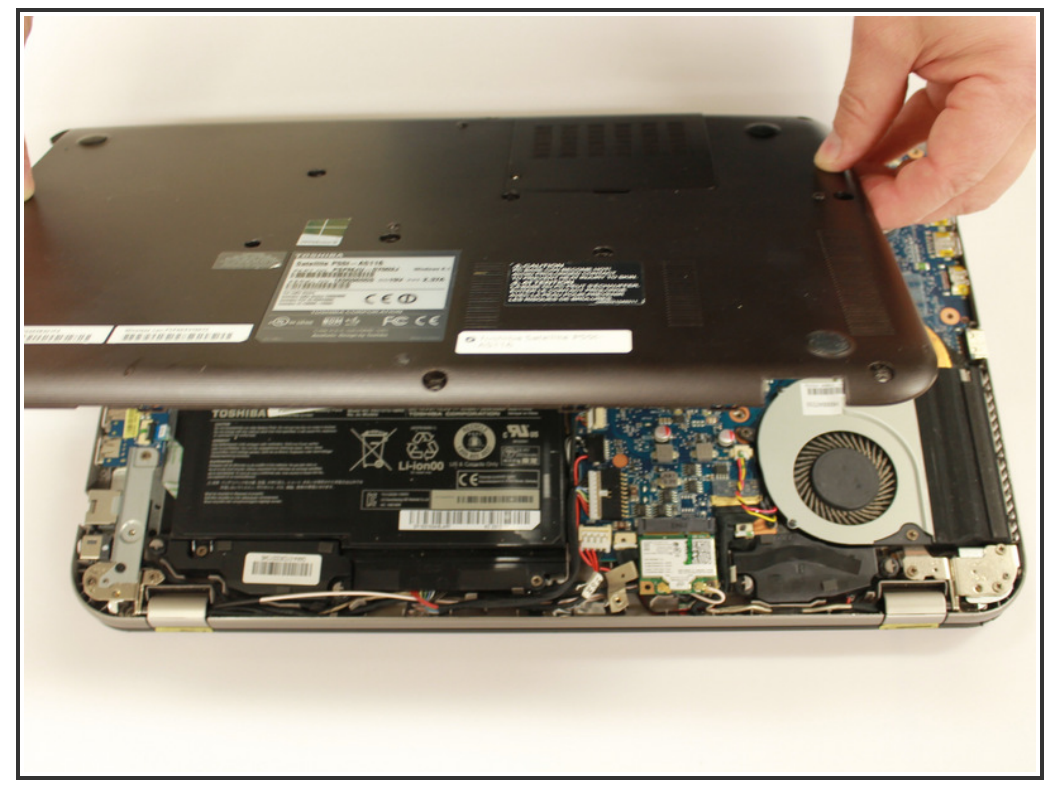

- Gently pry off the bottom case with the plastic opening tools.
- Find the seam between the back case and the rest of the laptop casing.


Step 4 — Battery

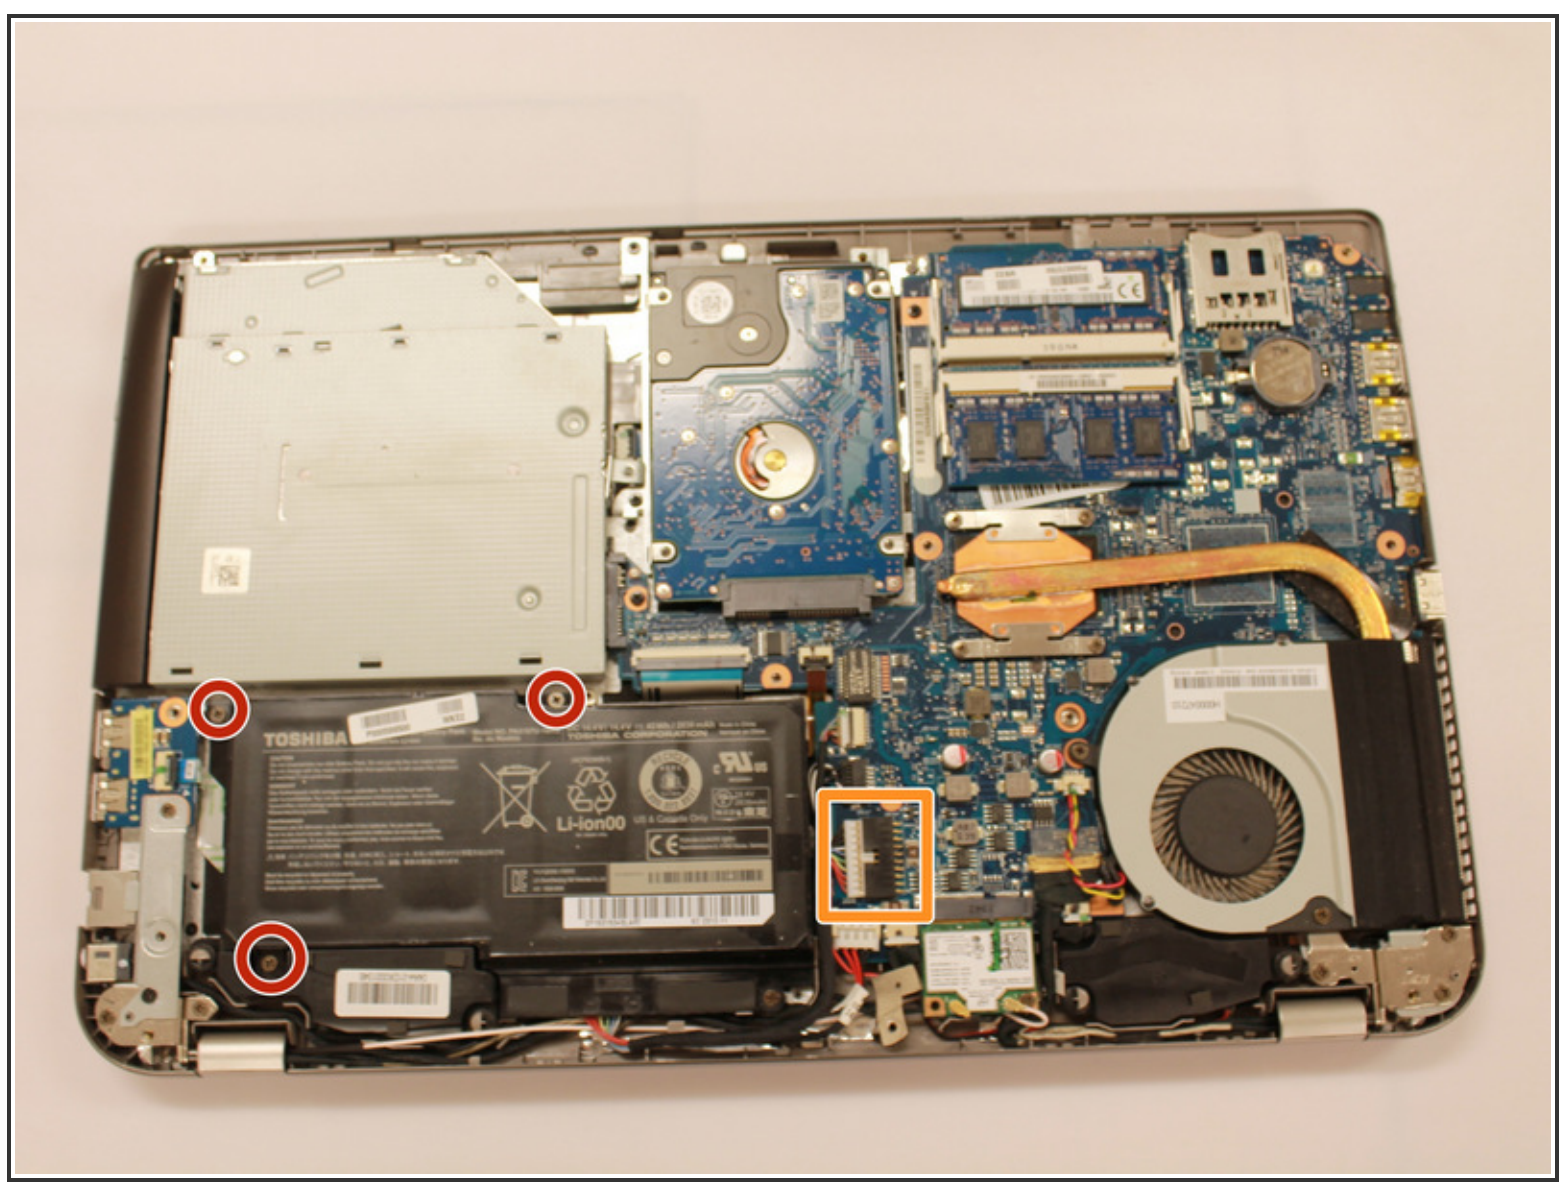

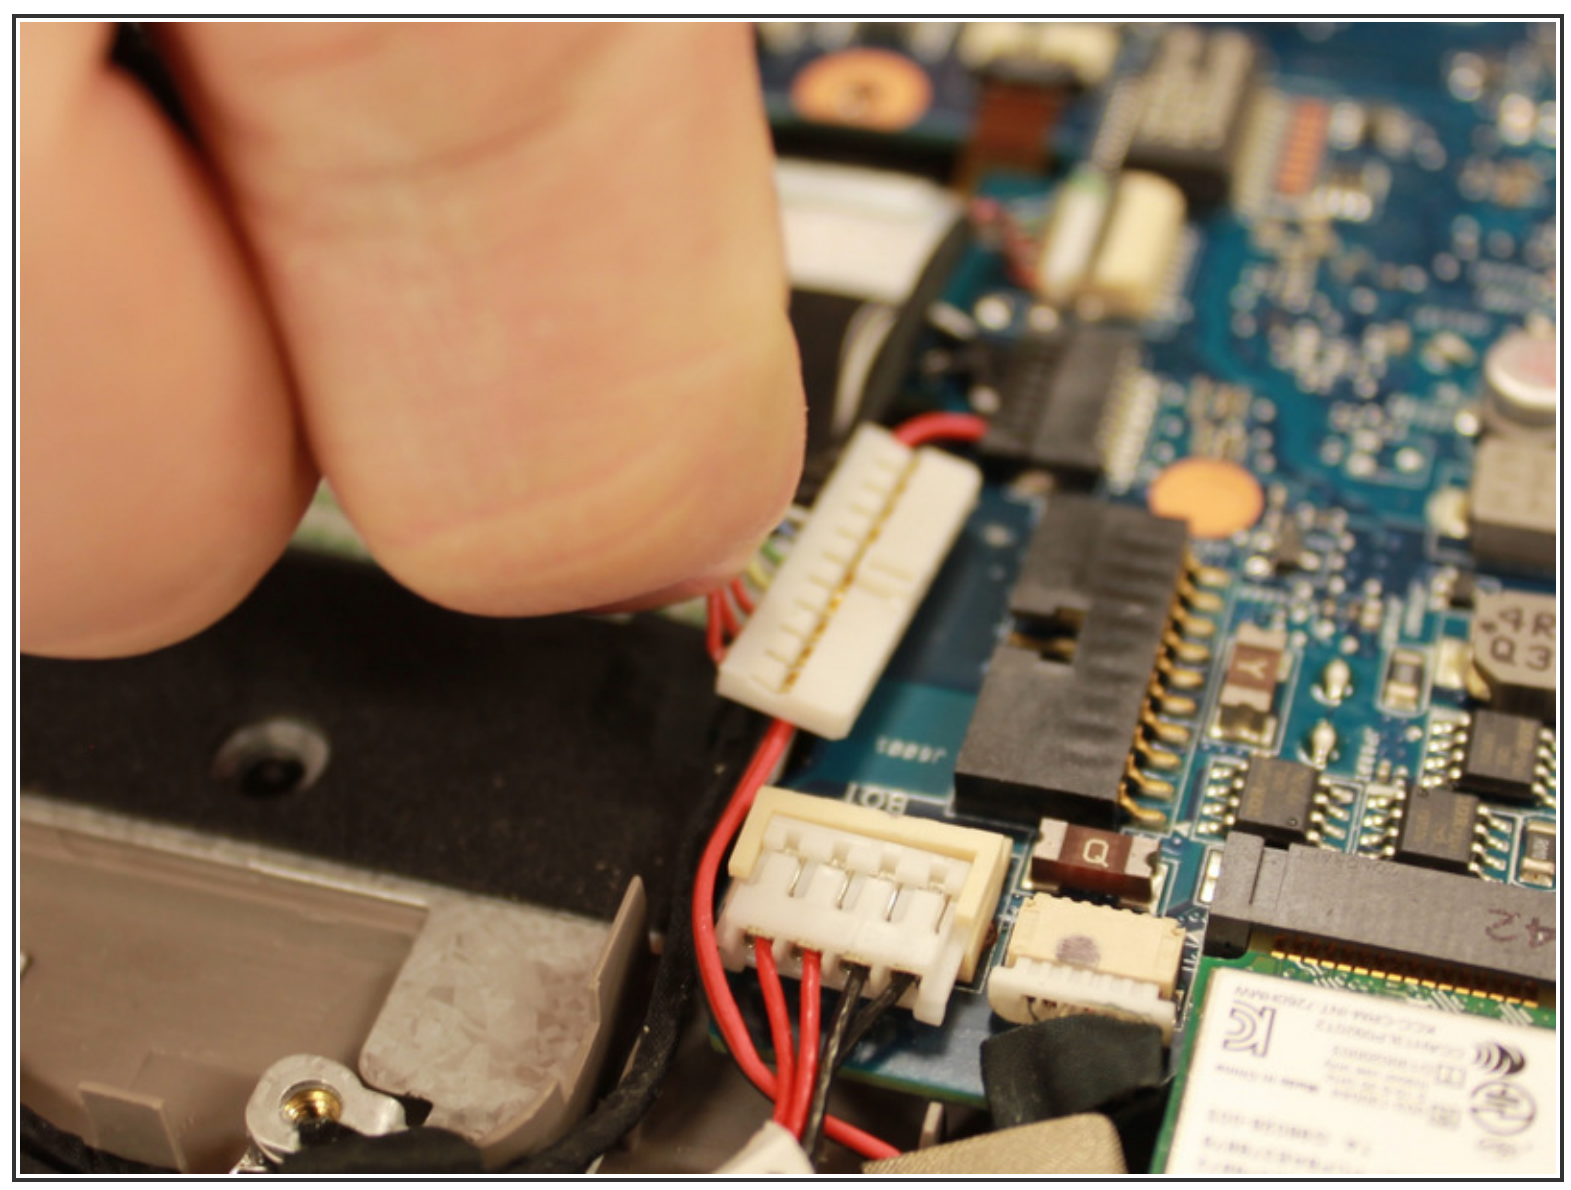


- Use the #PH0 screw head, remove 3 (5.7mm) screws.
- Unplug the battery's 10 pin connector and gently lift the battery out of the laptop.


Step 5

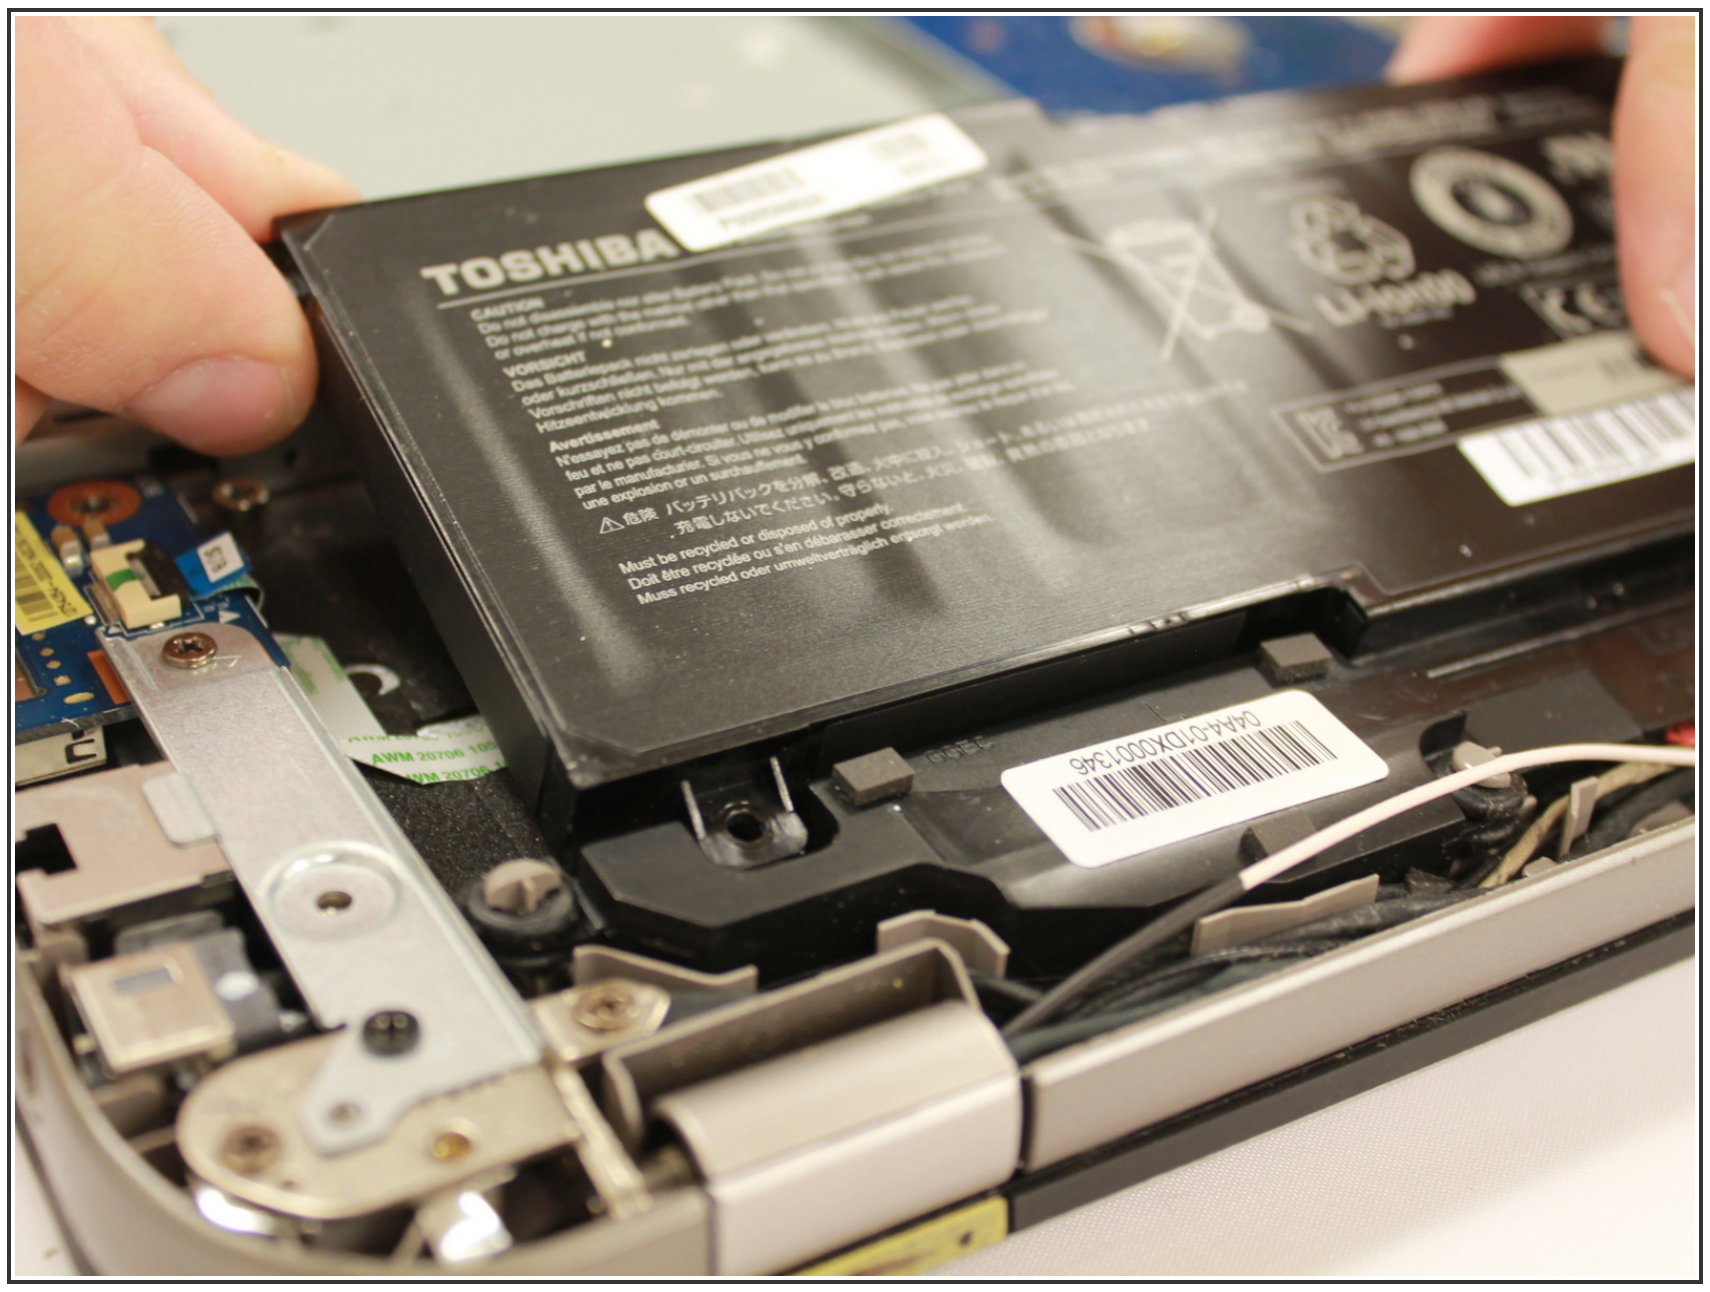


- Gently remove battery from the laptop.

Step 6 — Power Jack

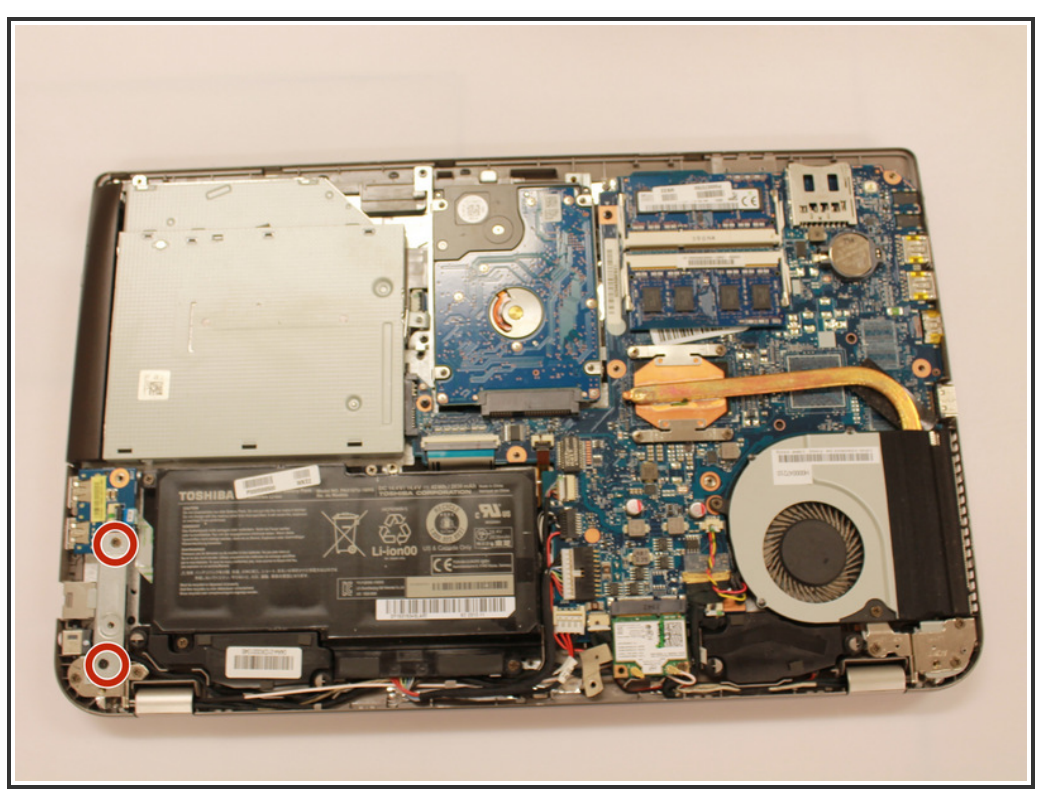


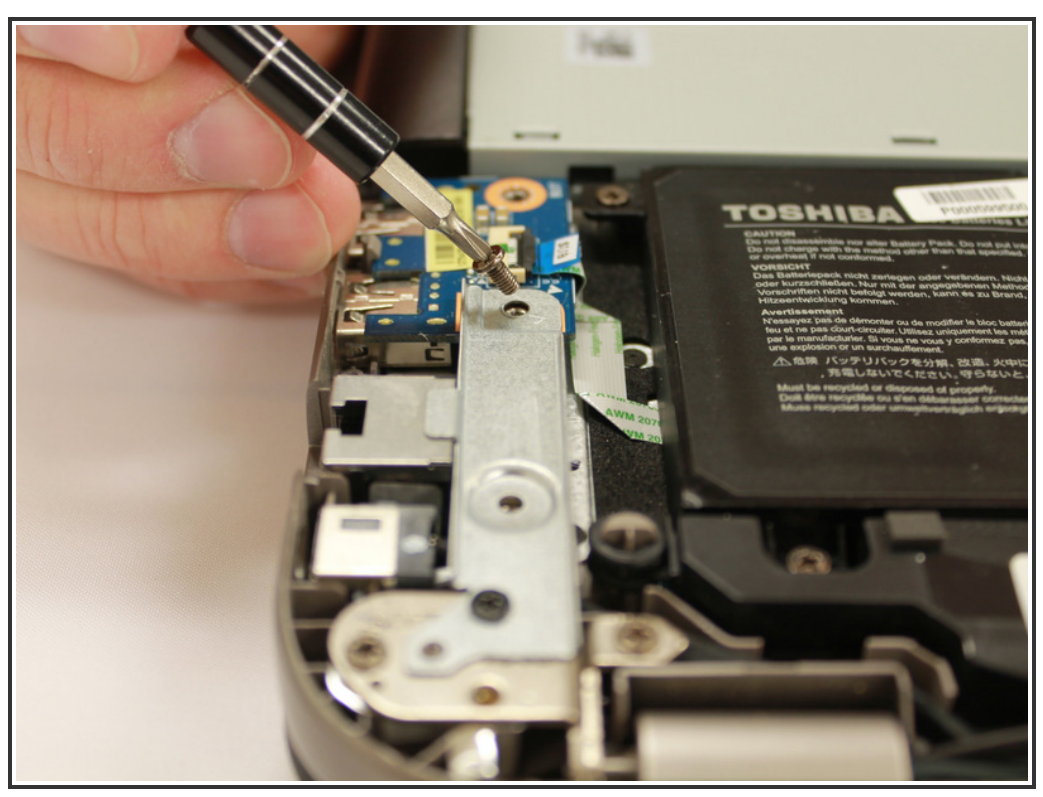

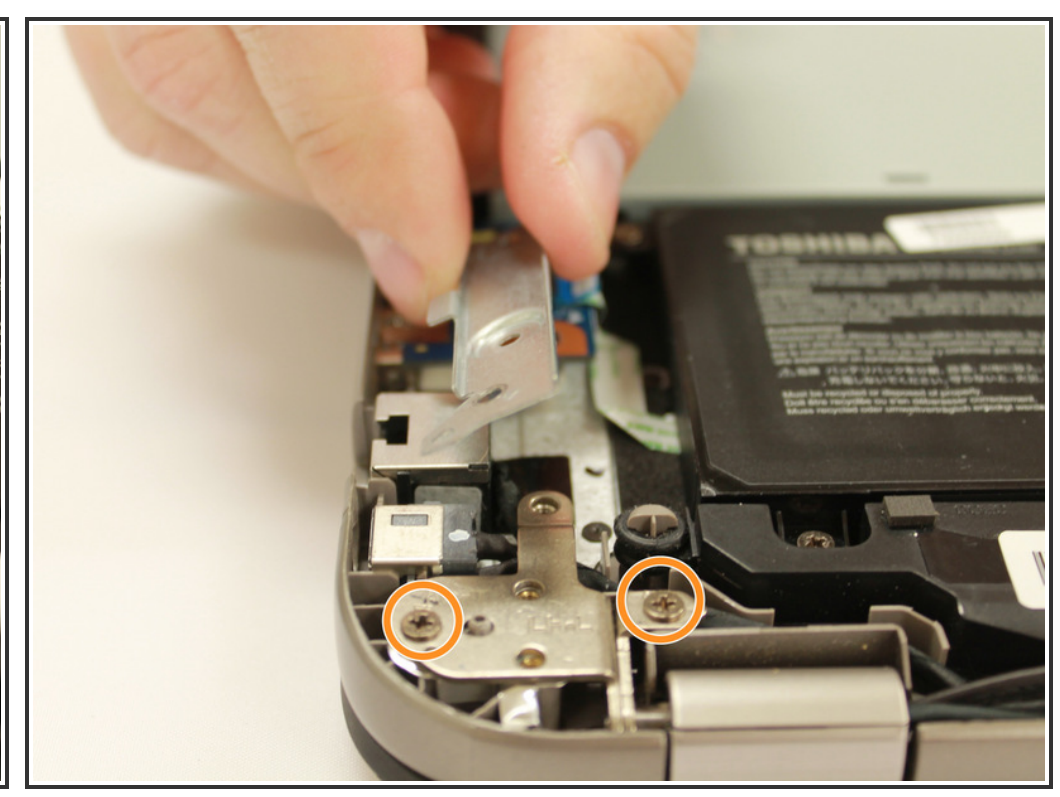


- Using the #PH0 screw head, remove 2 (5.7 mm) screws.
- Remove metal plate.
- Using the #PH0 screw head remove 1 (5.7mm) screw and 1 (4.15mm) screw.

Step 7

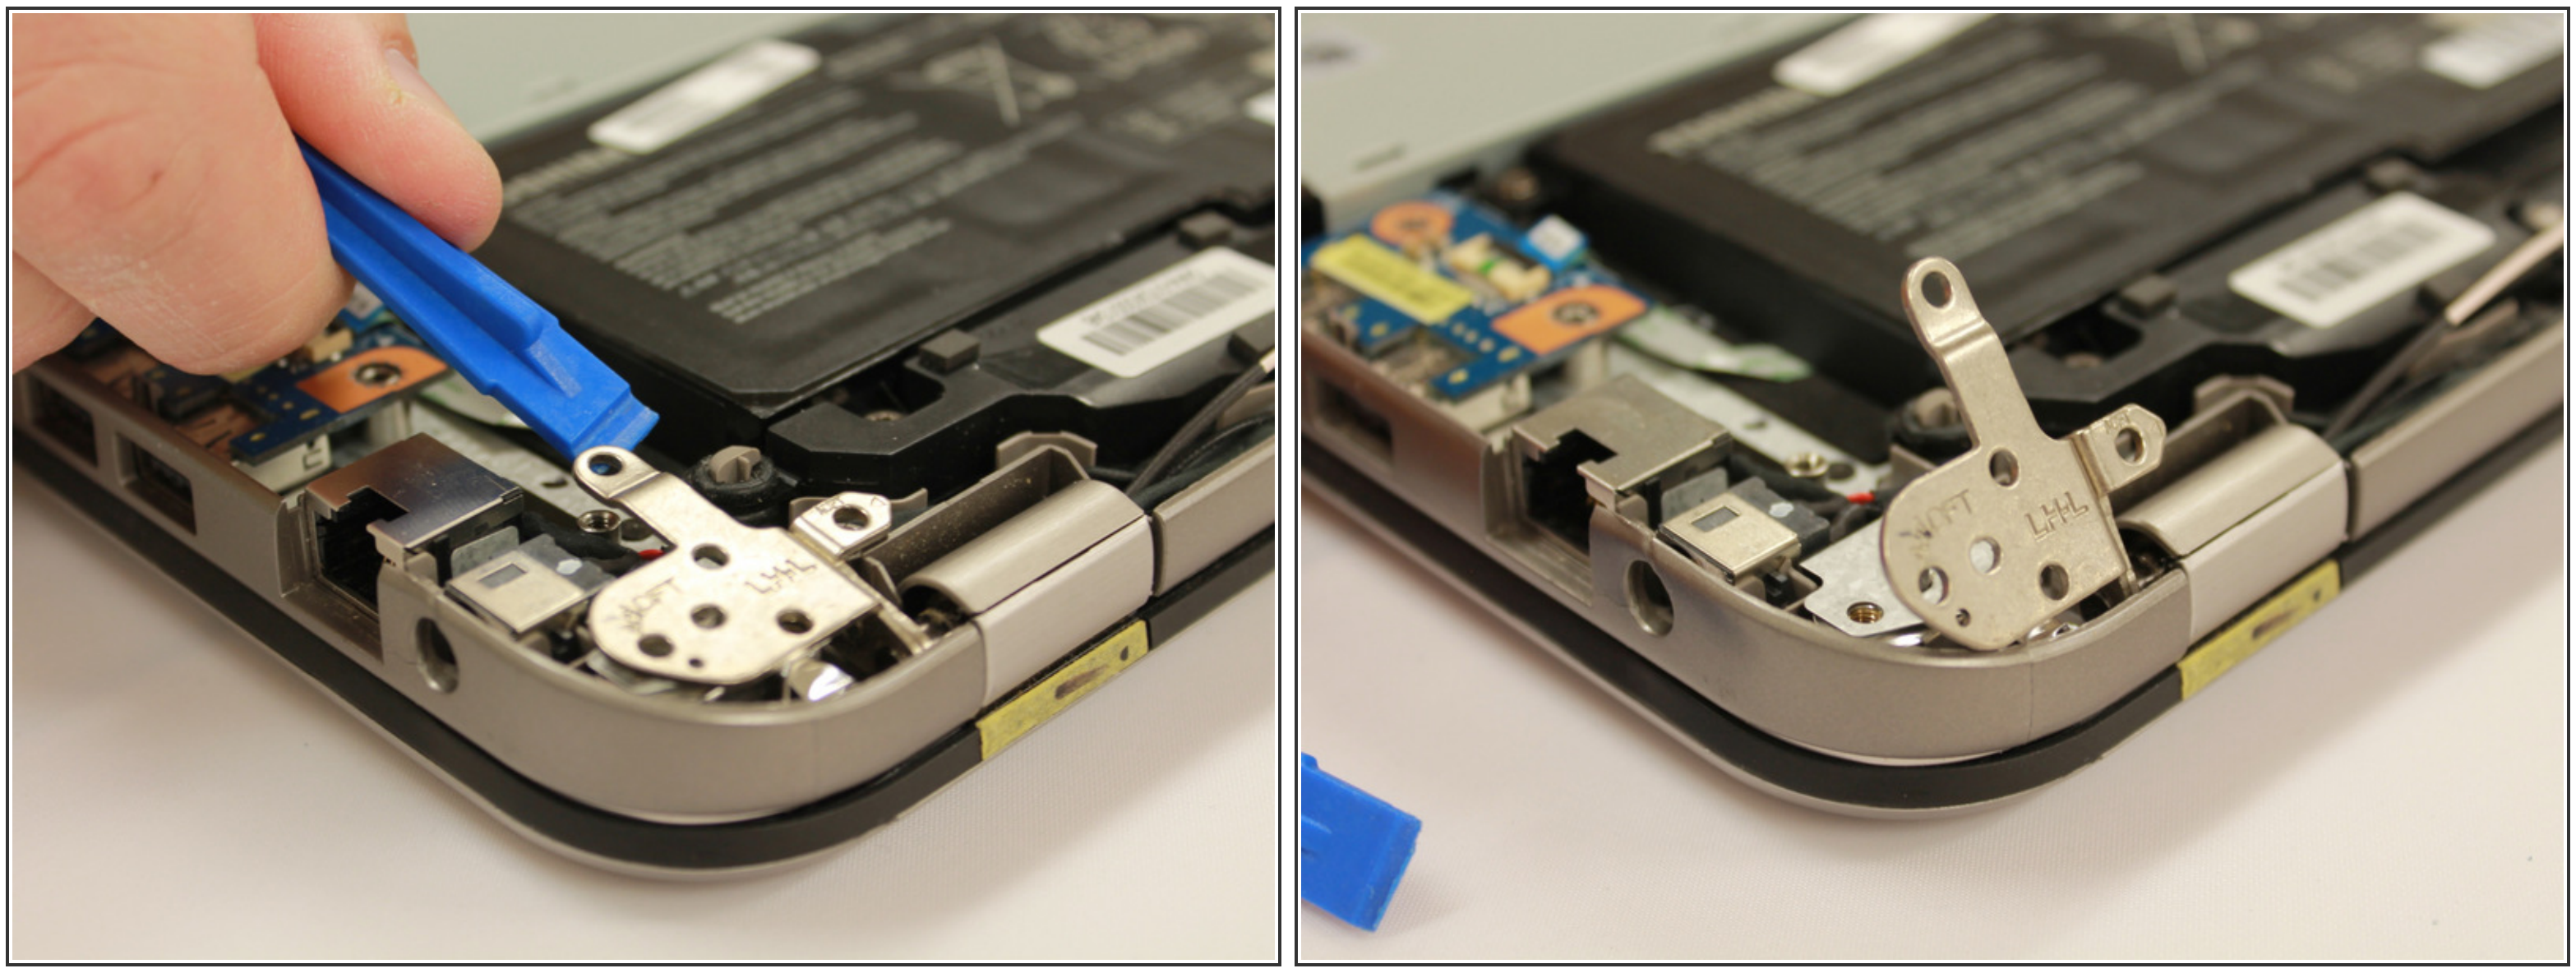

- Use the plastic opening tool to push the left hinge up.

Step 8

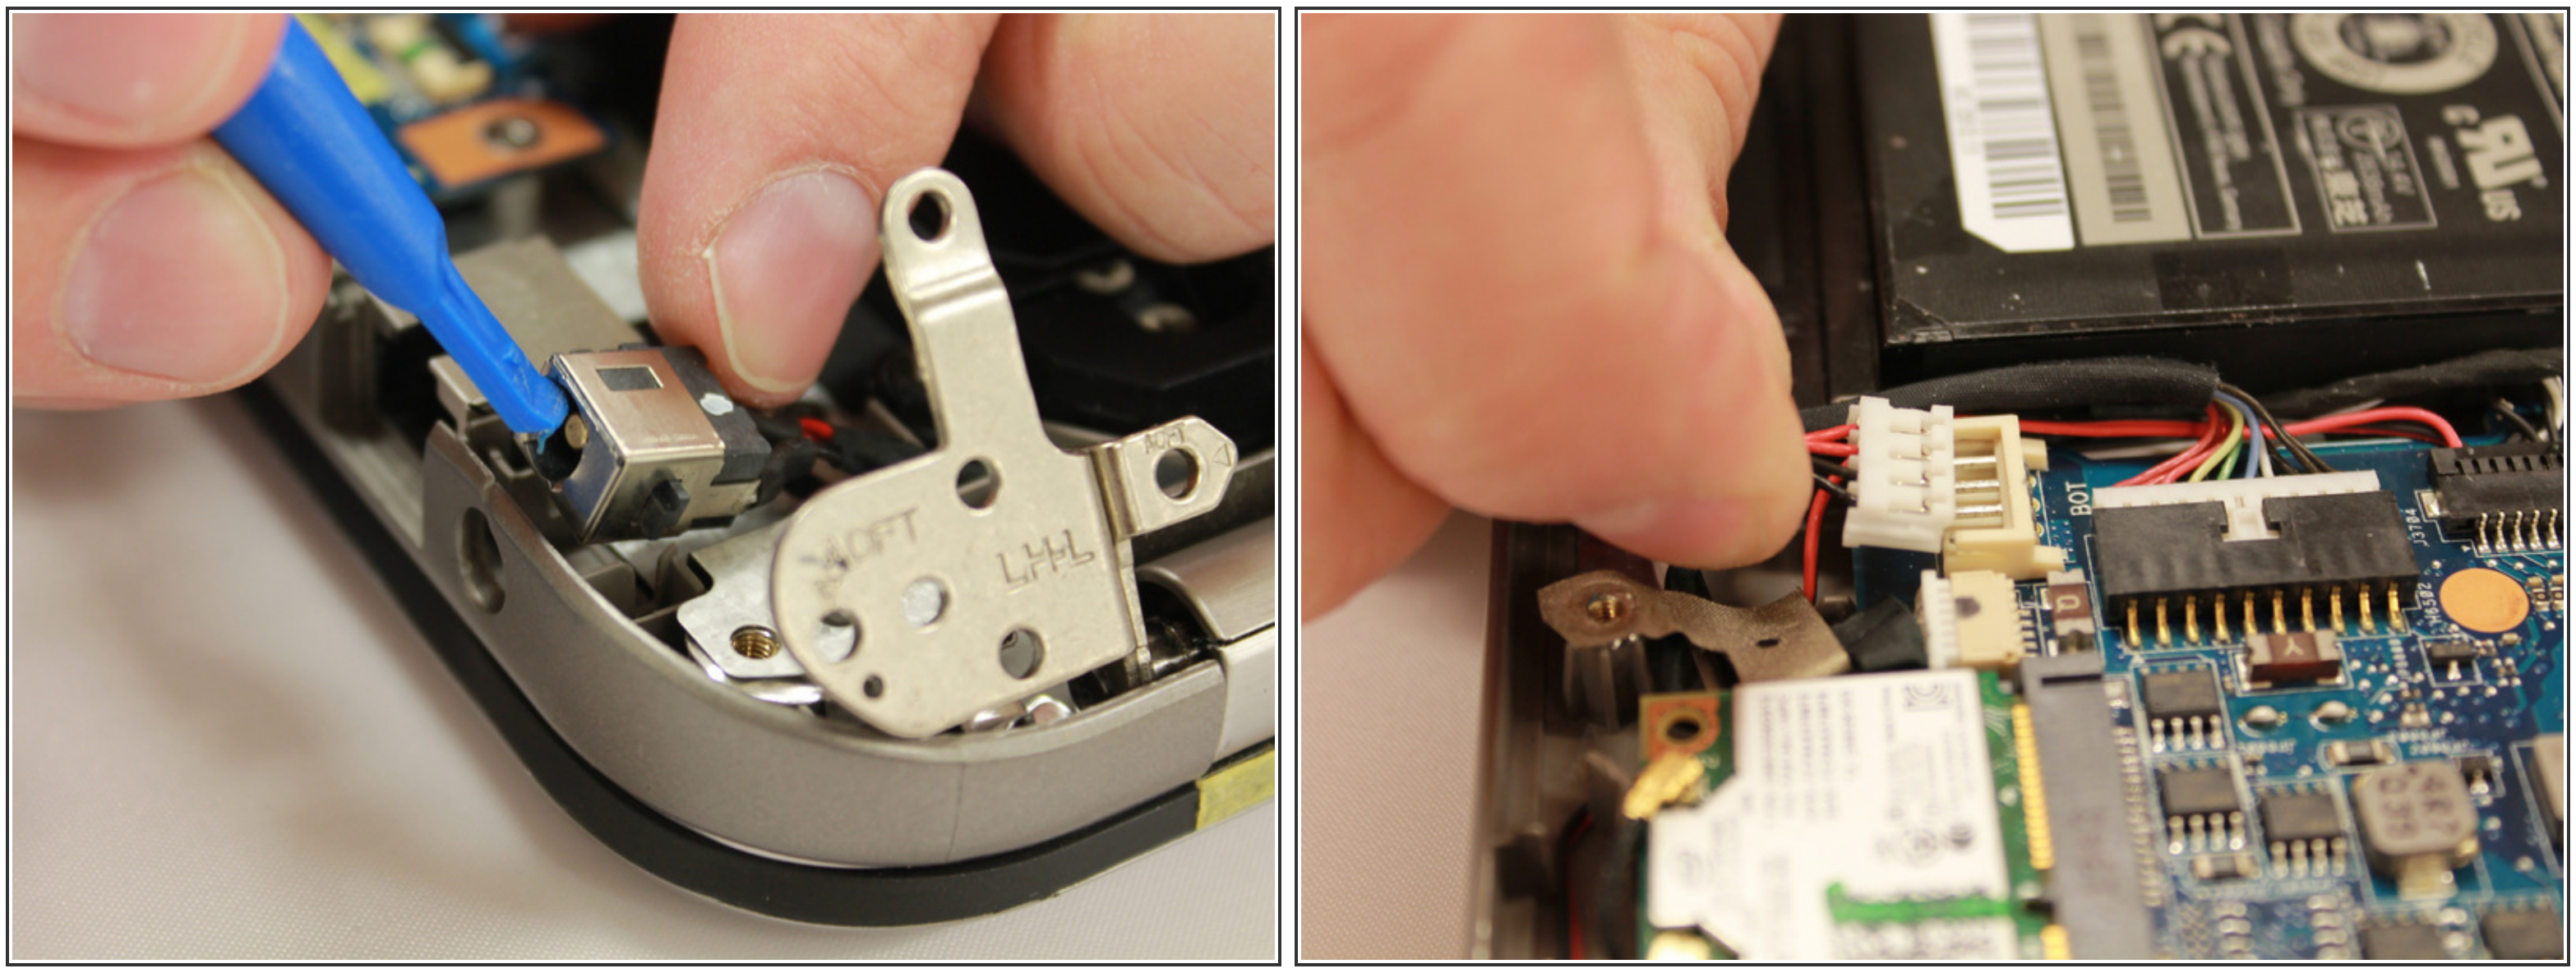

- Gently pull up the power jack. Follow the cord until you reach the connector.
- Unplug the 4 pin connector and remove from laptop

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 08:55:19 PM.